


How to factory reset a Cisco Meraki switch

Author	Date	Revision
Samuel Knoppe	4/9/2024	1.0

Related product (if any):	Cisco Meraki MS120, MS130, MS125, MS210, MS225, MS250, MS350, MS355, MS390, MS410, MS425, MS450
Description:	Shows the steps on how to factory reset a Cisco Meraki MS-series network switch.
Symptoms:	N/A
Cause:	N/A
Files Needed:	N/A

Steps to Correct:

1. Find a paper clip and locate the reset hole on the network switch.
2. Hold down the reset button for 10-15 seconds. The LED on the device will turn off.
3. The device will reboot and reset. It may take up to 5-10 minutes for the device to provision.

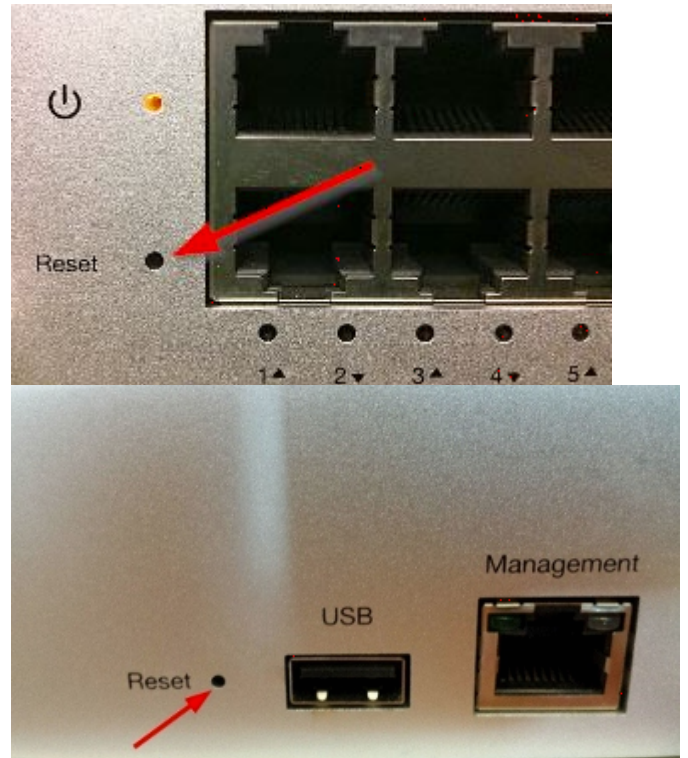

Revision #3

Created 2024-04-10 13:08:54 UTC by Samuel Knoppe

Updated 2024-04-18 15:04:53 UTC by Samuel Knoppe